

Technology-Enhanced Classroom Basic Instructions

with Wall Plate Controller

DH 340

Components installed:

- Computer
- Data Projector
- Screen
- Screen Up/Down Switch
- Speakers
- Wall Plate Controller

Components that can be connected if brought to room:

- Laptop
- DVD Player (note that most DVDs can be played from a laptop)
- VHS VCR

How to Connect Components to Wall Plate Controller:

1. Laptop

Press "DISPLAY POWER" and hold for 5 full seconds

Disconnect VGA cable from computer and connect to laptop. VGA cable is attached to jack labeled "COMPUTER" on controller

If using audio, you must bring in an audio cable. Connect laptop to controller with audio cable, to jack labeled "AUDIO" to the right of "COMPUTER" jack

Do **not** press "PC" button until you see the projection on the screen; then press "PC"

Adjust volume knob if necessary

Press "MUTE VIDEO" to briefly interrupt video display

2. DVD Player

Press "DISPLAY POWER" button and hold for 5 full seconds

Connect DVD player to yellow/white/red jacks on controller, labeled "VIDEO" and "AUDIO" (L and R)

Do **not** press "COMPOSITE VIDEO" button until you see the projection on the screen; then press "COMPOSITE VIDEO"

Adjust volume knob

Press "MUTE VIDEO" to briefly interrupt video display

3. VHS VCR

Press "DISPLAY POWER" button and hold for 5 full seconds

Connect DVD player to yellow/white/red jacks on controller, labeled "VIDEO" and "AUDIO" (L and R)

Do **not** press "COMPOSITE VIDEO" button until you see the projection on the screen; then press "COMPOSITE VIDEO"

Adjust volume knob

Press "MUTE VIDEO" to briefly interrupt video display

4. When finished, turn DISPLAY POWER off

Questions, Concerns, Additional Training, Call Academic Technology Support, Ext 7355